



# REQUIREMENTS FOR VENTILATION IN THE ROOM WHEN INSTALLING AN AUTOMATIC BIO-FIREPLACE

RIGHT

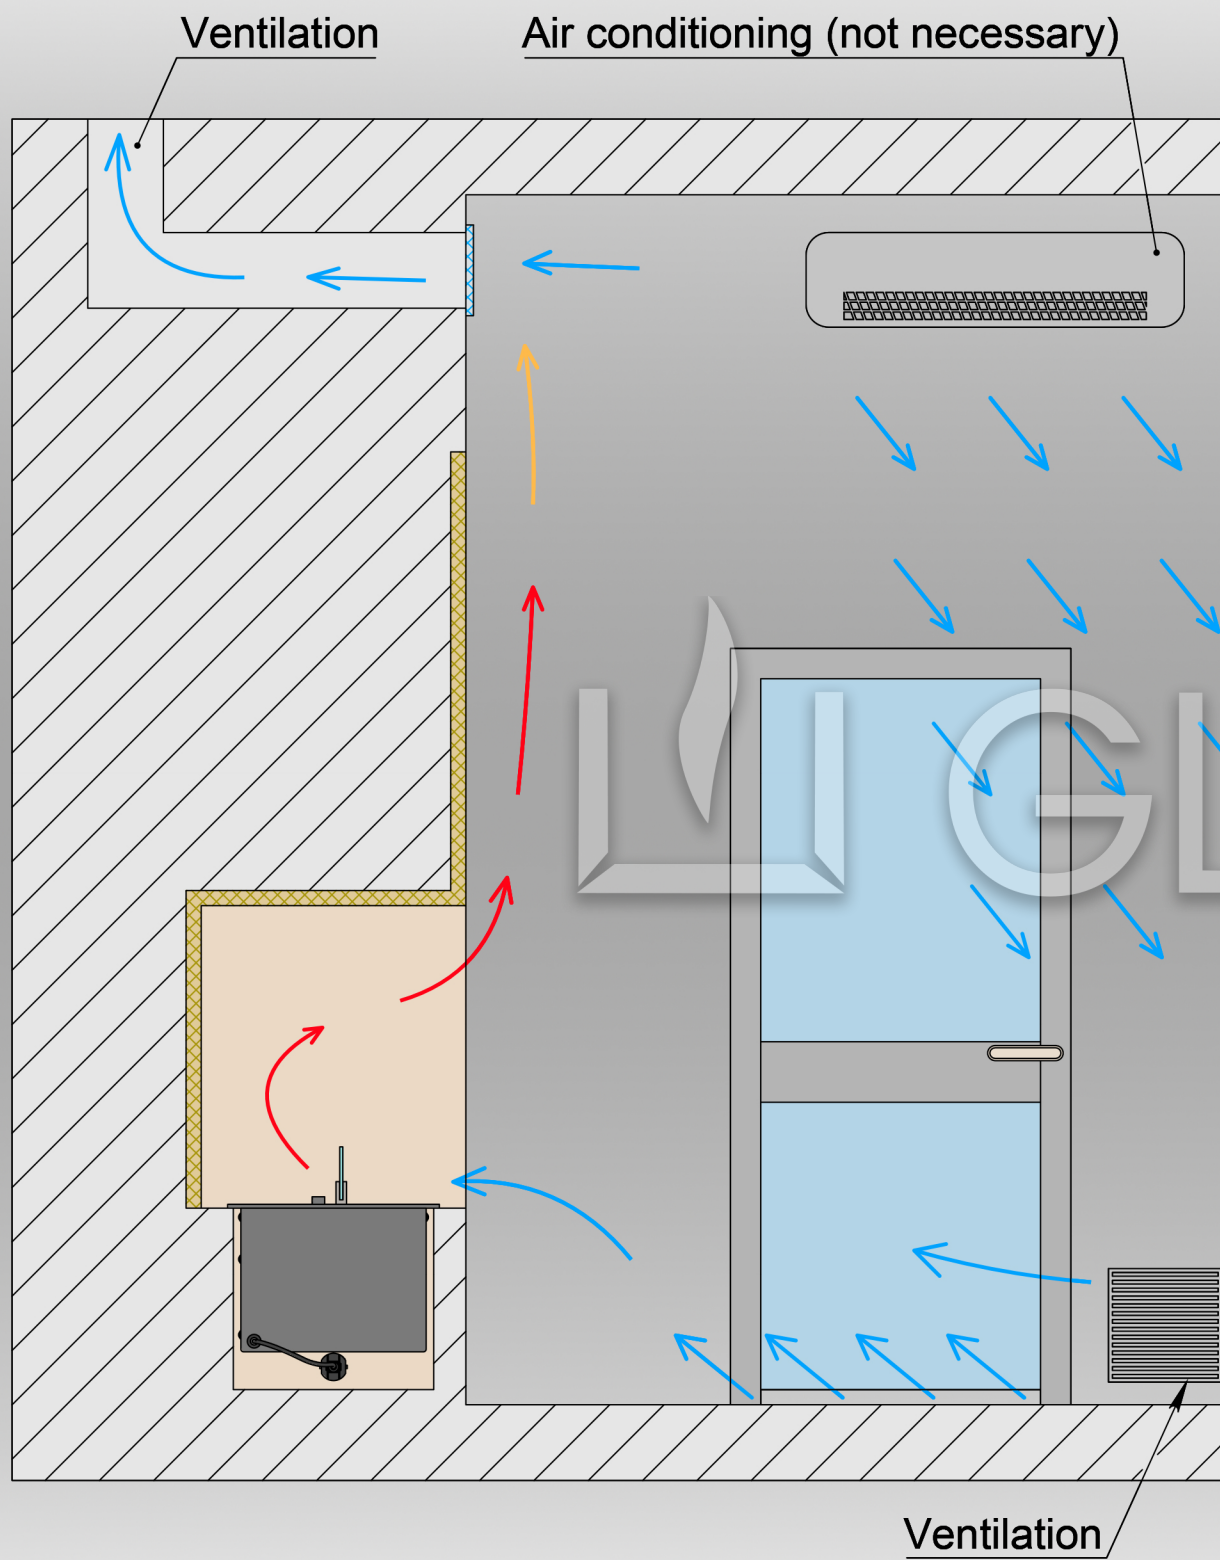

WRONG

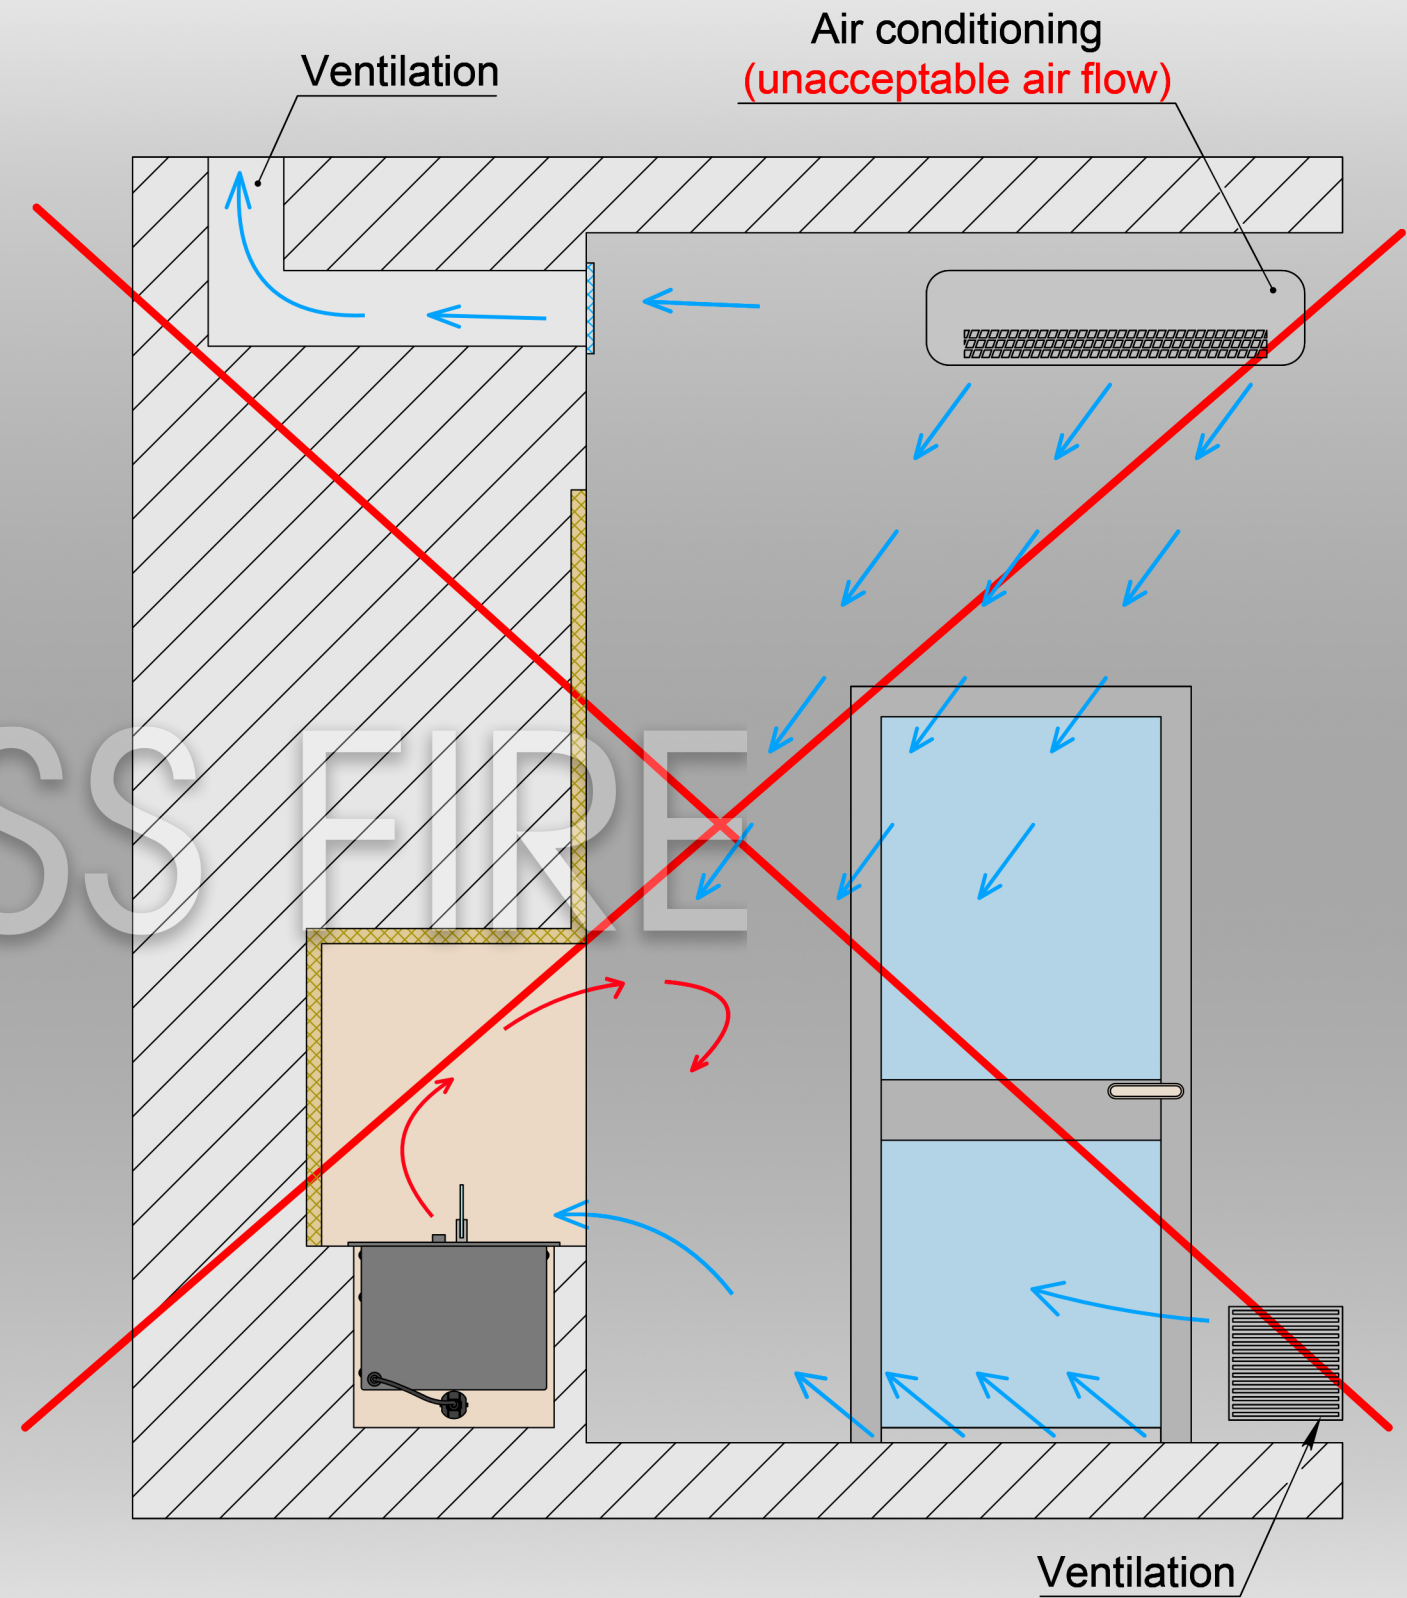

- - cold air
- - warm air
- - hot air

**Attention!** When the biofireplace is operating, it is necessary to ensure a constant flow of fresh air into the room. Do not install the bio-fireplace in drafty areas. Installing glass on bio-fireplace is a must. Electrical connection - Euro socket Min. 3x1.5 mm<sup>2</sup>, 230 V, 50 Hz, PE ⊕